


## Setting Intercom on Snom 360

### INTRODUCTION

Intercom is one of the programmable keys available on your Snom 360 phone that has auto receive and speed dialing options. This feature is handy in an office environment for quick access to operators and secretaries. To enable this intercom feature on your Snom phone you need to follow the given steps.

### ENABLING INTERCOM

To enable this feature log into the interface of the phone, and from the home page click on **Function keys** under SET UP as shown below.

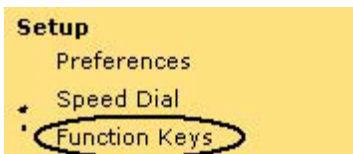

This will take you to a page where you can configure according to your choice. On the page go to the second set of keys classified under the head **Context, Type, and Number**.

	Type	Number
RECORD	Key Event	F_REC
RETRIEVE	Key Event	F_RETRIEVE
REDIAL	Key Event	F_REDIAL
HELP	Key Event	F_HELP
SNOM	Key Event	F_SNOM
CONFERENCE	Key Event	F_CONFERENCE
TRANSFER	Key Event	F_TRANSFER
HOLD	Key Event	F_R
DND	Key Event	F_DND
DIRECTORY	Key Event	F_ADR_BOOK

Context	Type	Number
Active	Line	
P1 john-worksmart-com@p8.wspbx.com	Intercom	< sip:sally-mycompany@p7.wspbx.com >
Active	Line	
P2 john-worksmart-com@p8.wspbx.com	Intercom	p7.wspbx.com;intercom=true>
Active	Line	
P3 Active	Line	
Active	Line	
P4 Active	Line	
Active	Line	
P5 Active	Line	
Active	Line	
P6 Active	Line	



From the keys under **Context** choose the one which you prefer to set for intercom and choose your preferred outgoing identity as shown in the figure above. (john-worksmart-com@p8.wspbx.com). from the drop down menu under **Type**, choose Intercom as the option. Under the **Number** option enter the number or SIP of the other user to whom you want the connection to be enabled. Once this is done click on the **Save** button to save the changes.

## FUNCTIONS

1. Pressing on P1 during idle state automatically dials the set number or SIP and the call is auto received on the other end.
2. You can transfer incoming calls to the intercom set number or SIP by pressing on P1 key when the call is in the ringing state.

## LIMITATIONS

1. If the set number on the other end is not a Snom phone, the call that you make might not be auto received.
2. Once an intercom call is established it cannot be transferred.